


Exposed Portion of Wall Should Have Above Grade Waterproofing To Prevent Water From Entering Through Wall Face or Construction Joints and Traveling Down Behind Paraseal.

Continuous Paraterm Bar Nailed Every 8" O.C. Finish Grade Should Occur at or Below Paraseal Waterproofing.

Permanent Tape at all Vertical Seams.

Superstop Waterstop. Install 2" In From Outer Face of Wall.

Note: Paraseal Products require a minimum 24 psf compaction/ confinement to be effective.

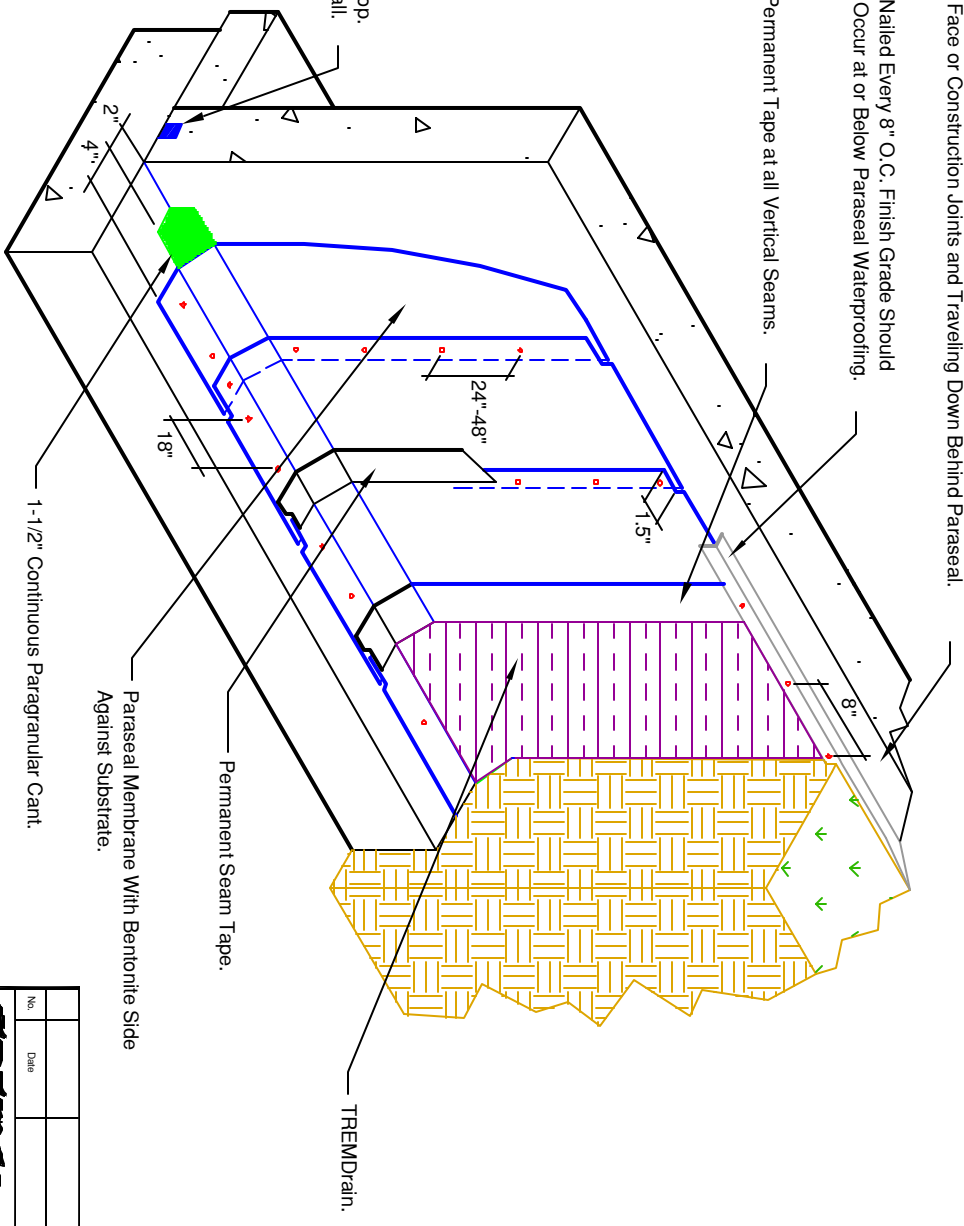

Paraseal Installation w/ Seams Running Vertically

No.	Date	Description	By
<p>TREMCO. 3736 Green Road Beverlywood, Ohio 44122 216-282-8000</p>			
<p>Project: Backfilled Walls</p>			
Drawn by:	Scale:	Date:	Drawing/Issue No.
W. Hensley	Not To Scale	04/04/05	BFW-01