


Superstop Waterstop. Install 2" in From Outer Face of Wall.

Paraseal Below Floor and Footing (See Section C, "Below Slab-on-Grade").

24" Strip of Paraseal Placed Inside Formwork. Bentonite Toward Installer.

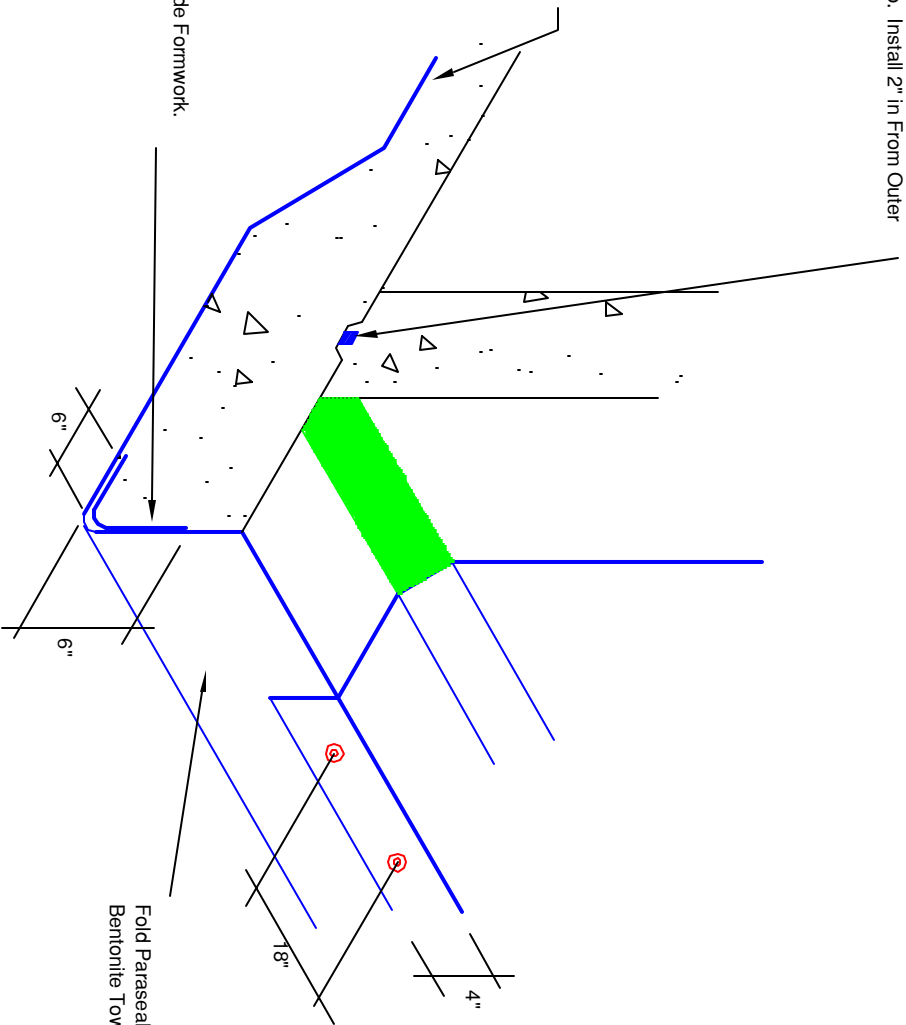

Fold Paraseal LG Up Inside Formwork. Bentonite Toward Installer.

Note: Paraseal Products require a minimum 24 psf compaction/ confinement to be effective.

Tie-In Between Below Floor Paraseal and Wall Paraseal

No.	Date	Description	By
TREIMCO. 3724 Glenn Road Beachwood, Ohio 44122 216-282-8000			
Project: Backfilled Walls			
Drawn by: W. Hensley	Scale: Not To Scale	Date: 05/31/05	Drawing/Issue No. BFW-04