


Note:
Tremprime QD or another Tremco approved primer must be applied before the application of TREMproof 6100

Note: In cases where pavers butt over the drain area, a metal plate may be utilized to span the gap over the drain.

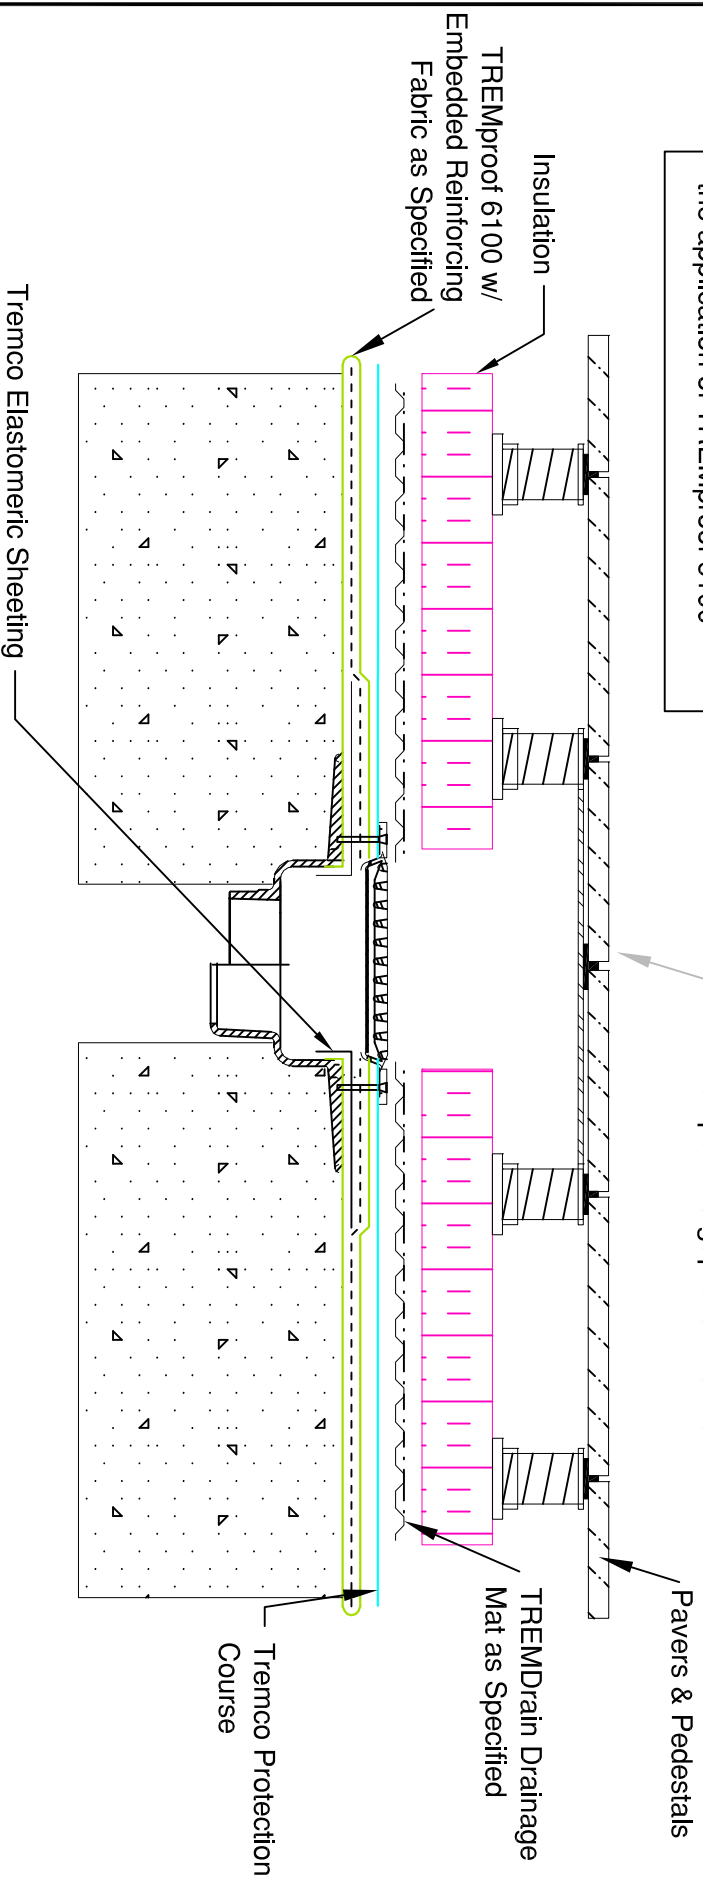

Treatment of Staged Drain When Paver Supports Line Up Over Drain



3735 Green Road * Beachwood, OH 44122
Phone : 866-209-2404 * Fax: 216-766-5535

Detail		Drawing Number
Hot Applied Details		H-36
Drawn by:	Scale:	Date:
K. Thorpe	None	08/13/09