



Cut Paraseal or Deckseal to Accommodate Double Fold As Shown. Nail Both Flaps Down To Wall. (This Should Occur Over Installation of Wall Paraseal. See RDP-11)

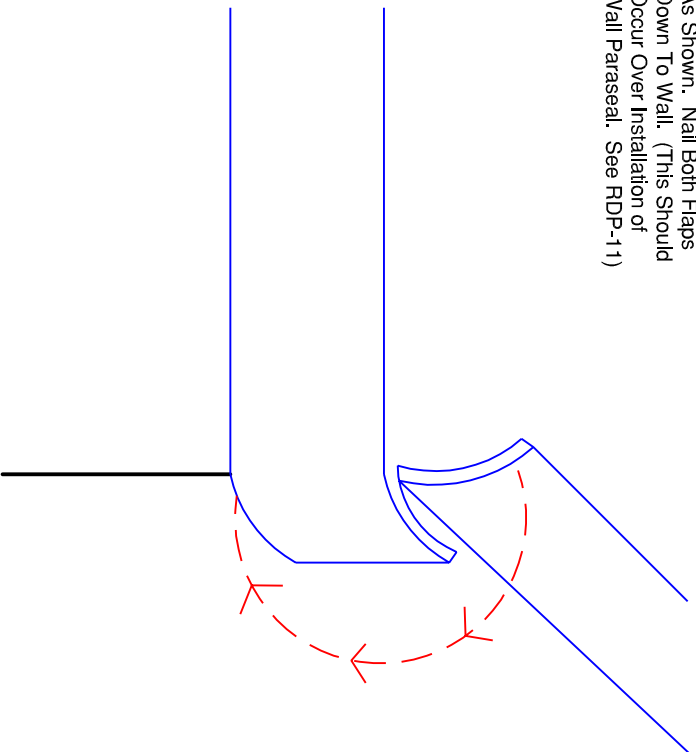

STEP 1

Nail Bottom Edges Every 24" (61cm) o.c. tape Entire Vertical Seam of Corner With Temporary Tape. (Part of Tape Omitted For Clarity)

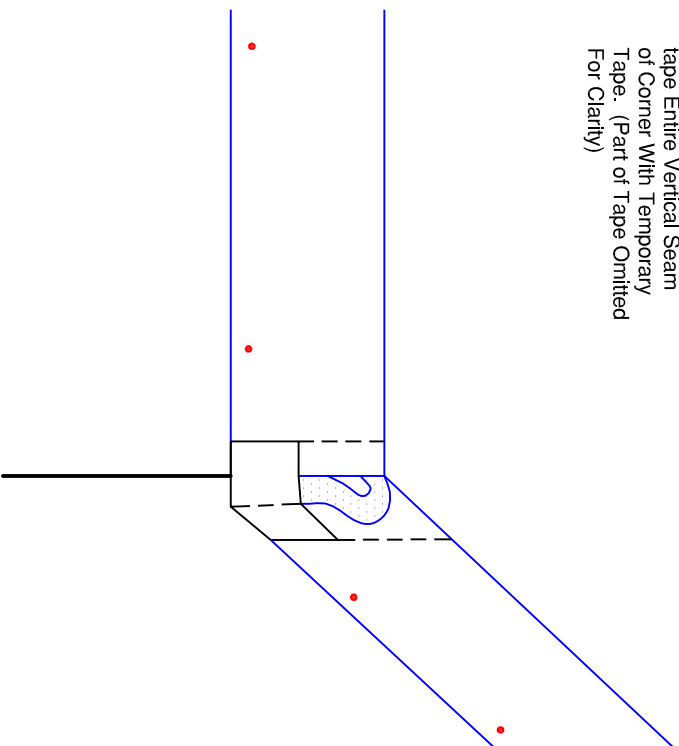

STEP 2

3 Plane Outside Corner. (By Folding Paraseal)

No.	Date	Description	By
<p>TREMCO 3735 Green Road Beachwood, Ohio 44122 216-292-5000</p>			
<p>Project: Roof Decks / Planters</p>			
Drawn by:	Scale:	Date:	Drafting/Revis. No.
J. Davis	Not To Scale	07/18/01	RDP-18