


Exposed Portion of Wall Should Have Above Grade Waterproofing To Prevent Water From Entering Through Wall Face or Construction Joints and Traveling Down Behind Paraseal.

Continuous Paraterm Bar Nailed Every 8" O.C.  
Finish Grade Should Cover Paraseal Waterproofing.

Permanent Tape at all Vertical Seams.

Superstop Waterstop,  
Install 2" In From Outer Face of Wall.

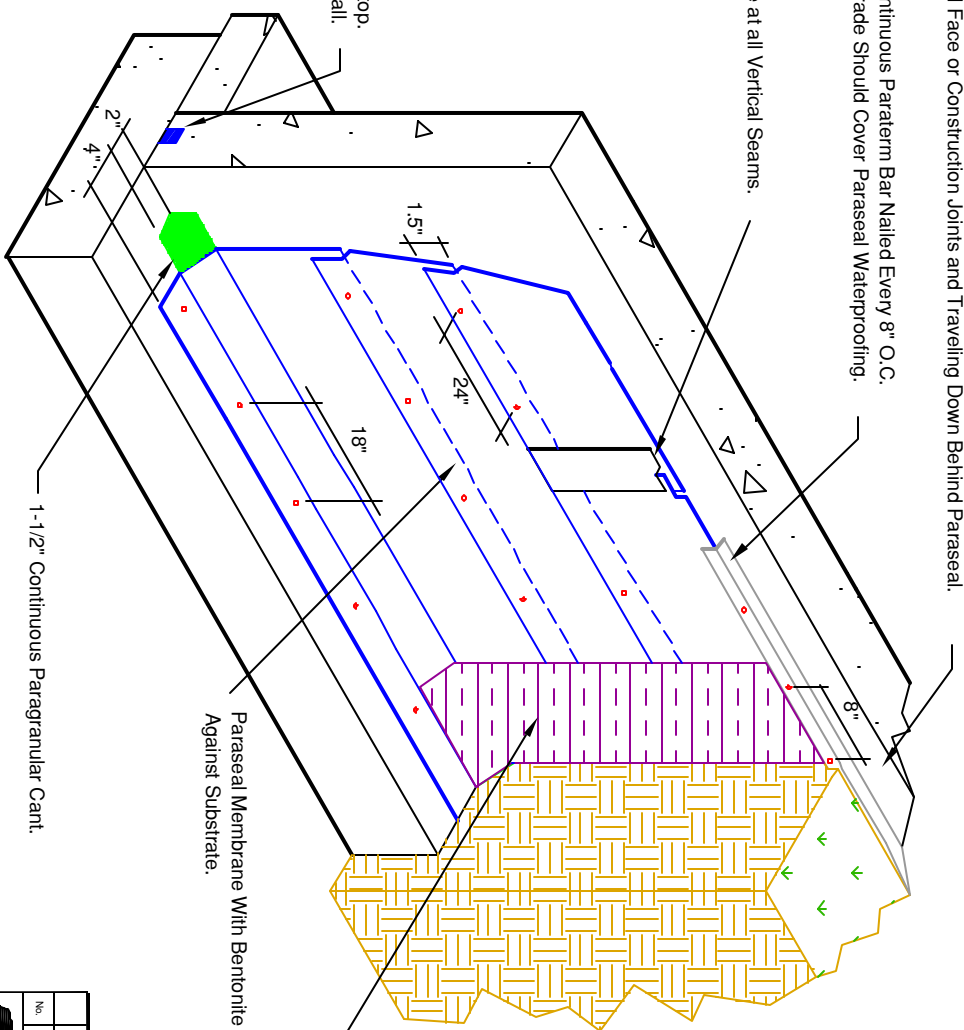


Paraseal Membrane With Bentonite Side  
Against Substrate.

TREMDrain installed  
vertically or horizontally.

1-1/2" Continuous Paragrander Cant.

Note: Paraseal Products require  
a minimum 24 psf compaction/  
confinement to be effective.

Paraseal Installation w/ Seams Running Horizontally

| No.   | Date         | Description | By                |
|---|--------------|-------------|-------------------|
| <br><b>3736 Green Road</b><br><b>Bloomington, Ohio 44122</b> <b>216-262-8000</b> |              |             |                   |
| Project: <b>Backfilled Walls</b>  |              |             |                   |
| Drawn by:   | Scale:       | Date:       | Drawn/Revised No. |
| W. Hensley  | Not To Scale | 04/04/05    | BFW-02            |