


### Overlap joint continuation

1. Apply Spectrem 1 across the end of overlapping extrusions
2. Place the Spectrem Simple Seal over the top of the existing extrusion and firmly press into place to ensure complete contact
3. Tool excess Spectrem 1

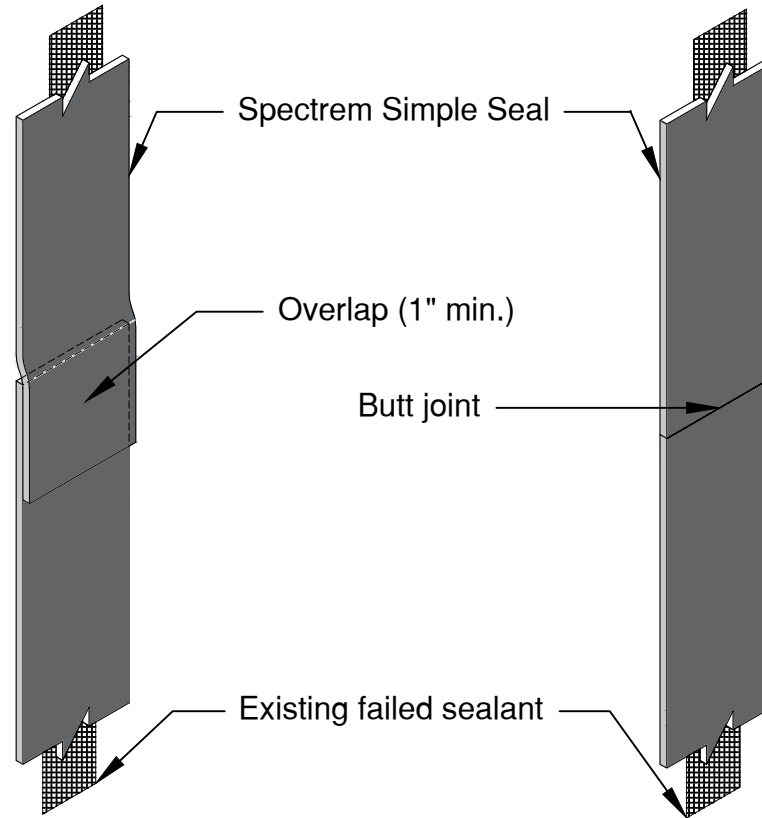

### Butt joint continuation

1. Use Spectrem 1 to butter the butt ends of the Spectrem Simple Seal
2. Install the Spectrem Simple Seal, ensuring the ends butt tightly together
3. Tool the Spectrem 1 of the butt joint flush with the surface

**TREMCO**

www.tremcosealants.com

3735 Green Road \* Beachwood, OH 44122  
Phone : 866-209-2404 \* Fax: 216-766-5535

Project:

Detail: Spectrem Simple Seal - Joint Continuation Details

Sheet Number:

File Name:

Rev #

00

This detail is intended for conceptual purposes only.

Drawn by: SD

Checked by:

Scale: None

Date: 10/26/2016