


**Note:**

- Spectrem Simple Sea should be wrapped tightly around outside corners.
- Sufficient amount of Spectrem 1 must be used to ensure that the extrusion remains in place until the adhesive has cured.
- If necessary, adhesive tape may be used to hold the extrusion in place until the Spectrem 1 has set up.
- An alternate solution would be an outside corner butt joint.

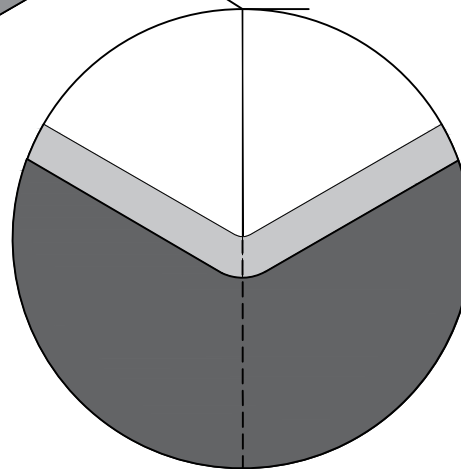

**TREMCO**

www.tremcosealants.com

3735 Green Road \* Beachwood, OH 44122  
Phone : 866-209-2404 \* Fax: 216-766-5535

Project:

Detail: Spectrem Simple Seal - Outside Corner Details

Sheet Number:

File Name:

Rev #

00

This detail is intended for conceptual purposes only.

Drawn by: SD

Checked by:

Scale: None

Date: 10/26/2016