


SPECTREM SIMPLE SEAL

APPLY SPECTREM 1 AT
CORNERS OF INTERSECTION

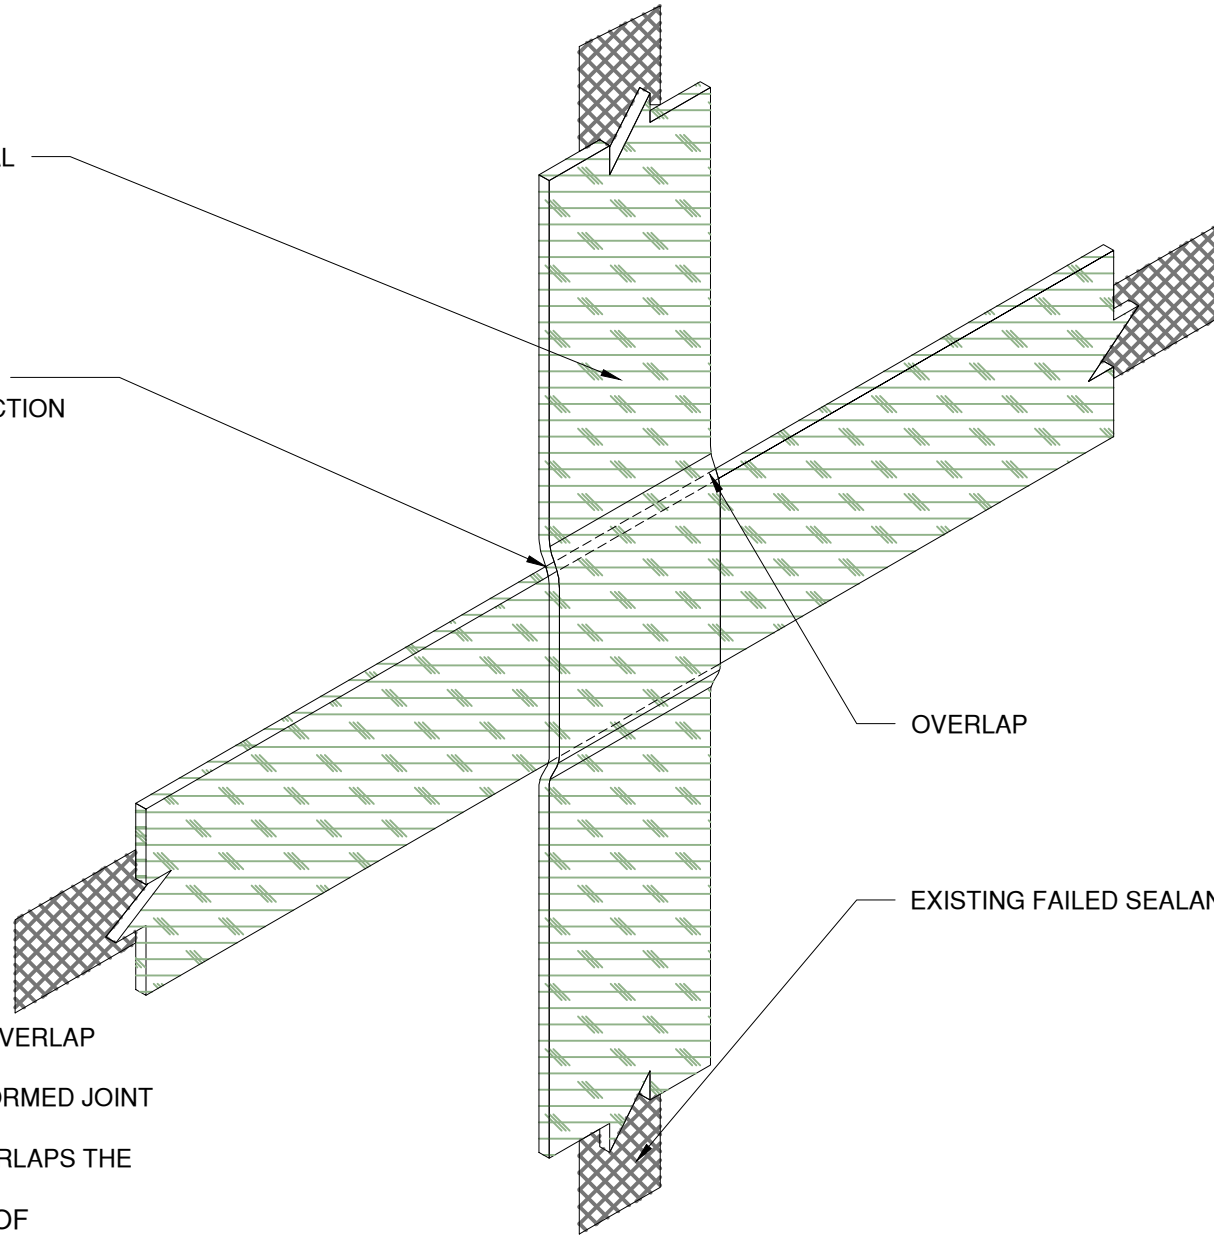

OVERLAP

EXISTING FAILED SEALANT JOINT

JOINT INTERSECTION OVERLAP

1. APPLY THE HORIZONTAL PREFORMED JOINT SEALANT FIRST
2. THE VERTICAL EXTRUSION OVERLAPS THE HORIZONTAL EXTRUSION
3. UTILIZE ADEQUATE AMOUNT OF ADHESIVE/SEALANT TO ENSURE COMPLETE CONTACT WITH BOTH SIDES OF THE VERTICAL AND HORIZONTAL PREFORMED JOINT SEALANT

The architecture, engineering, and design of the project using the Tremco products are the responsibility of the project's design professional. All products and systems must comply with local building codes and standards. This detail is for general information and guidance only and Tremco specifically disclaims any liability for the use of this detail. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.

Spectrem Simple Seal



Tremco Technical Support: 866-209-2404

Detail: Spectrem Simple Seal Joint Intersection Overlap

Drawn by: HDE

Checked by: AM

Scale: NTS

Date: 4/19/2022

File Name:

SSS-J-04

www.tremcocpg.com



Construction Products Group