


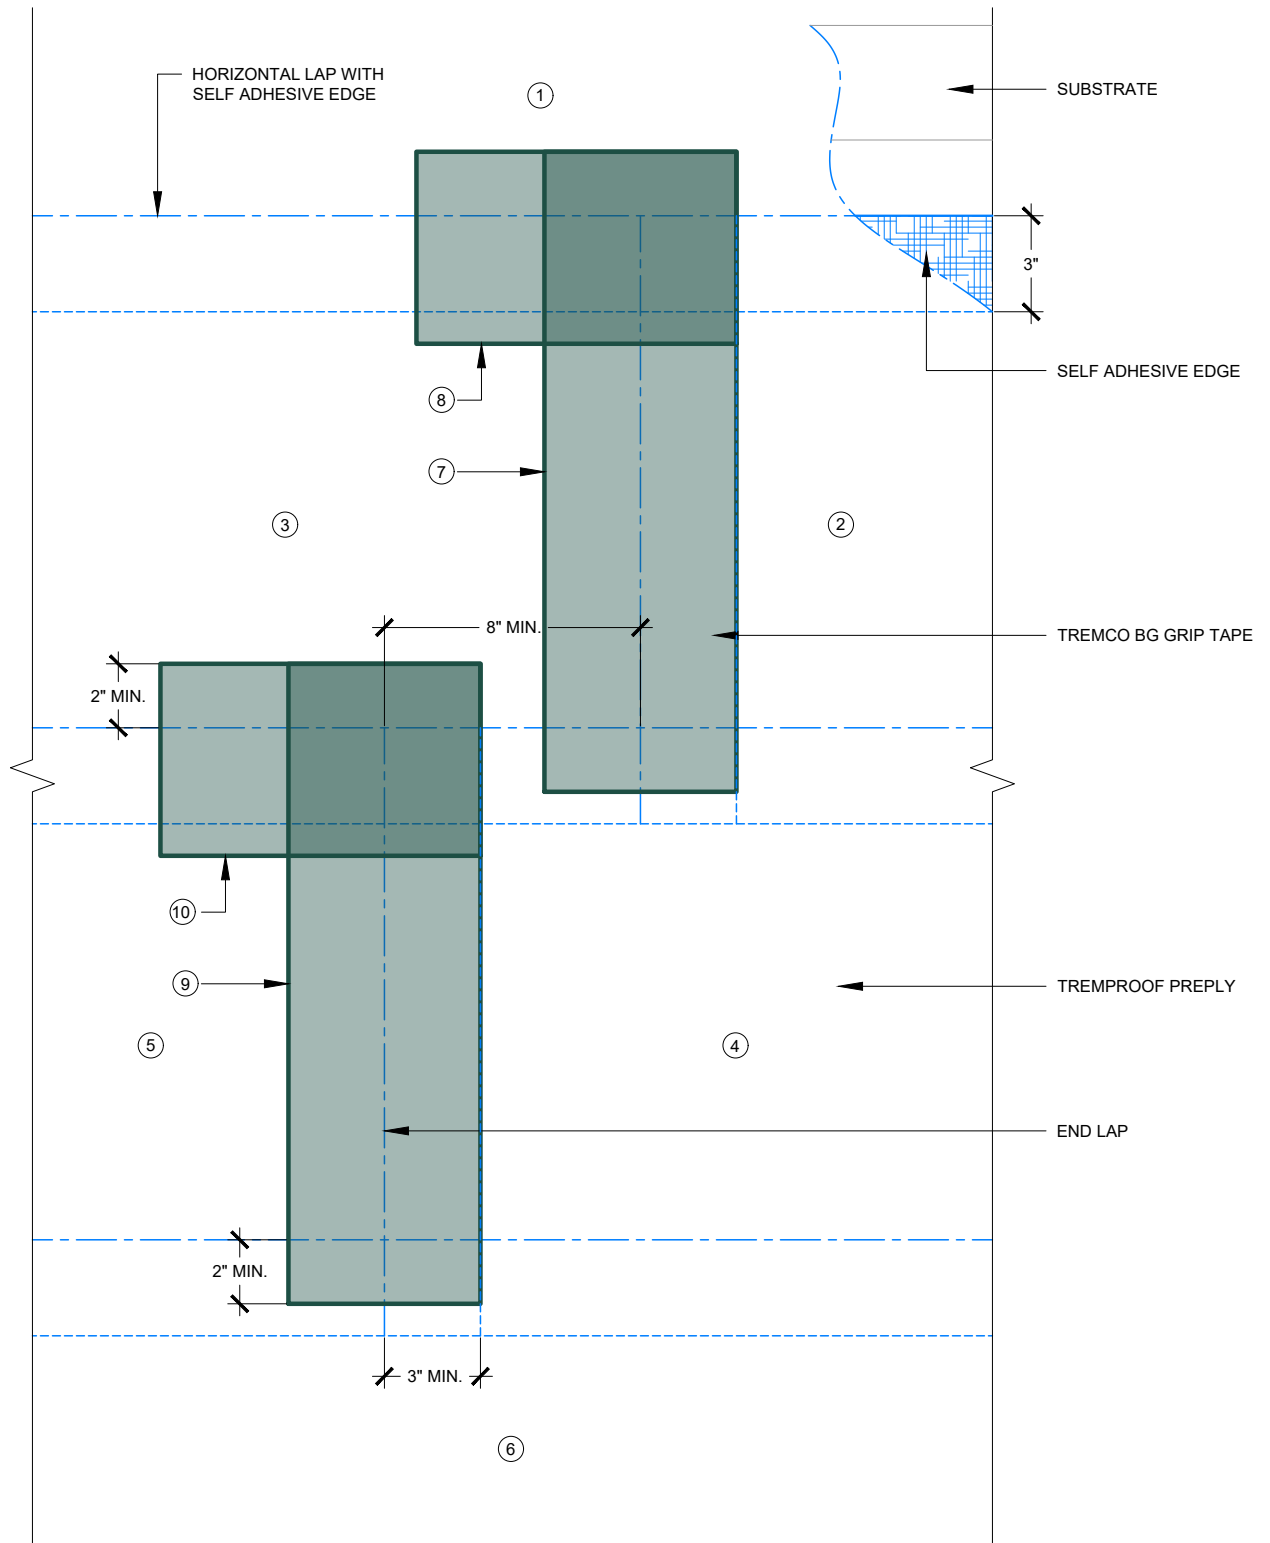

NOTE:

1. INSTALL TREMPROOF PREPLY ONTO APPROVED SUBSTRATE WITH THE ADHESIVE SIDE FACING THE INSTALLER.
2. OVERLAP THE ENDS OF THE MEMBRANE BY 3" MIN.
3. STAGGER END LAPS BY 8" MIN. AND COVER ALL END LAPS WITH TREMCO BG GRIP TAPE CENTERED OVER THE SEAM. EXTEND THE TREMCO BG GRIP TAPE PAST THE HORIZONTAL LAP 2" MIN. ABOVE AND BELOW THE SEAM.
4. INSTALL A SECOND PIECE OF TREMCO BG GRIP TAPE PARALLEL WITH THE HORIZONTAL SEAM ON THE EDGE WITHOUT THE ADHESIVE EDGE.
5. INSTALL TREMPROOF PREPLY AND TREMCO BG GRIP TAPE IN THE ORDER INDICATED BY NUMBERS.

This detail is for general informational purposes only. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project with respect to any architecture, engineering, and design requirements, including any local building code requirements. If this document is not reviewed and the product is not approved for use by a licensed design professional, the customer agrees that the detail may contain substantive flaws requiring correction, and hereby releases Tremco CPG Inc. from any and all liability related to the design and installation of the product. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.

TREMproof® PrePly™ - Blindside Wall



Detail: Seam Treatment - Horizontal and Vertical (Elevation View)

Drawn by: HDE

Checked by: MC

Scale: 2" = 1'-0"

Revision #: R0

Revised by: NA


Date: 4/17/2026

www.tremcocpg.com

File Name:

TPP BSW 1



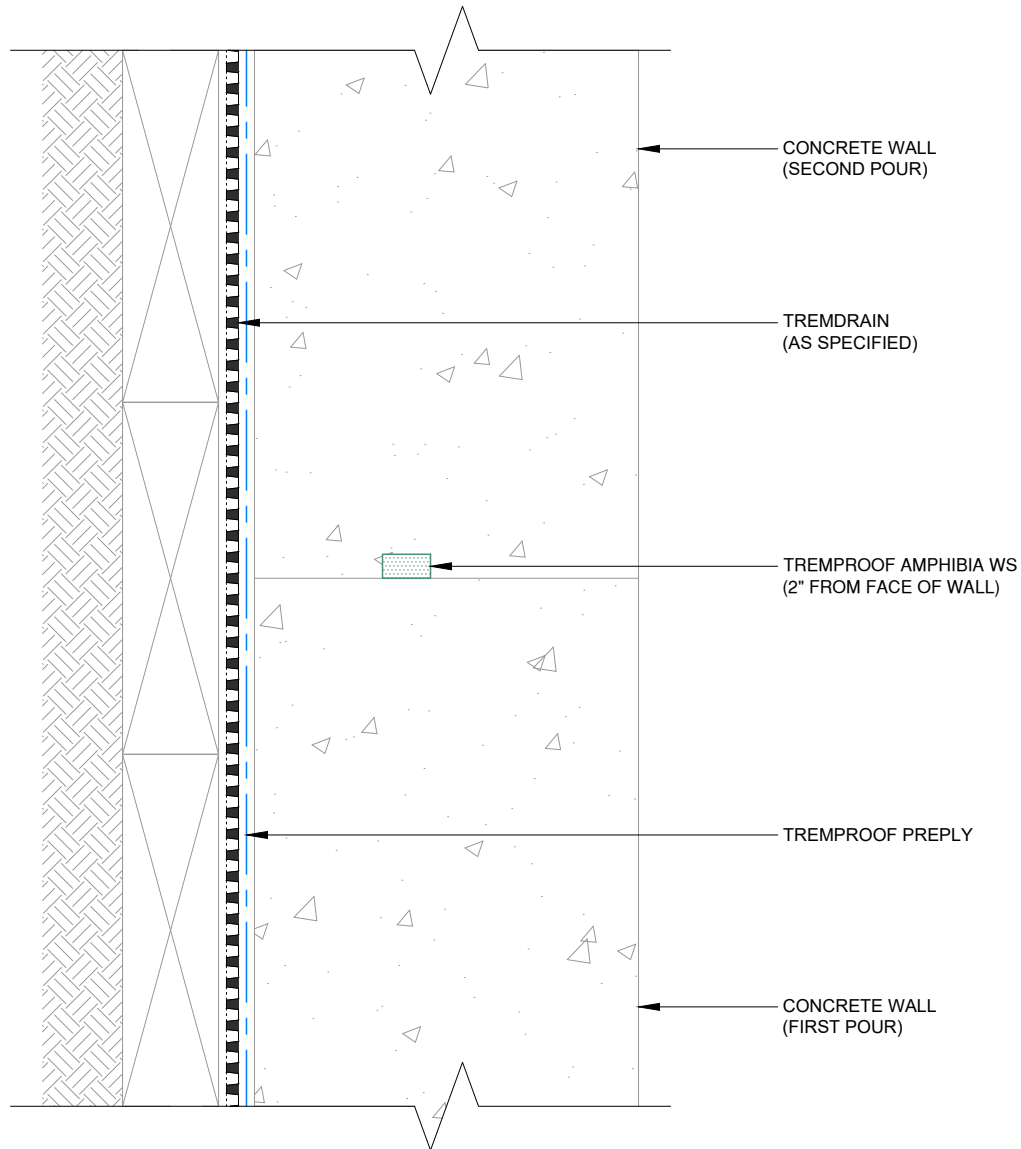

This detail is for general informational purposes only. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project with respect to any architecture, engineering, and design requirements, including any local building code requirements. If this document is not reviewed and the product is not approved for use by a licensed design professional, the customer agrees that the detail may contain substantive flaws requiring correction, and hereby releases Tremco CPG Inc. from any and all liability related to the design and installation of the product. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.


TREMproof® PrePly™ - Blindside Wall



Detail: Concrete Wall Construction Joint		
Drawn by: HDE	Checked by: MC	Scale: 4" = 1'-0"
Revision #: R0	Revised by: NA	Date: 4/17/2026

File Name:
TPP BSW 2



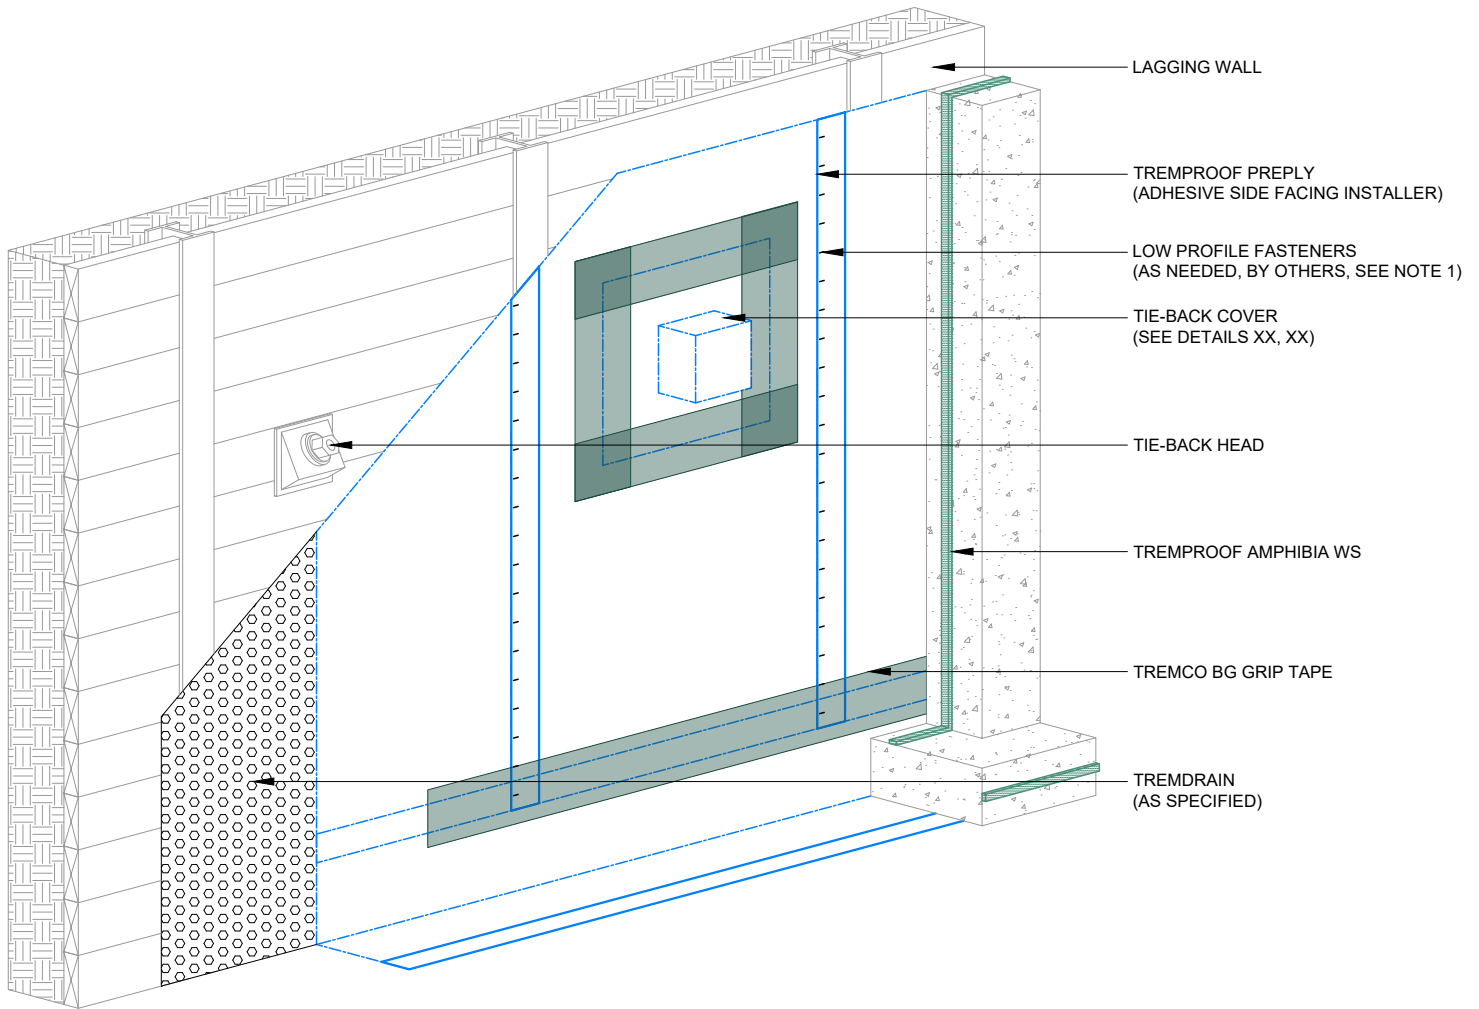

NOTE:
1. INSTALL LOW PROFILE FASTENERS WITHIN ADHESIVE LAP, AS NEEDED. FASTENERS SHOULD BE $\frac{1}{2}$ " MAX FROM EDGE OF SHEET.

This detail is for general informational purposes only. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project with respect to any architecture, engineering, and design requirements, including any local building code requirements. If this document is not reviewed and the product is not approved for use by a licensed design professional, the customer agrees that the detail may contain substantive flaws requiring correction, and hereby releases Tremco CPG Inc. from any and all liability related to the design and installation of the product. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.


TREMproof® PrePly™ - Blindside Wall



Detail: Lagging Wall with Soldier Piles		
Drawn by: HDE	Checked by: MC	Scale: NTS
Revision #: R0	Revised by: NA	Date: 4/17/2026

File Name:
NWP BSW 3



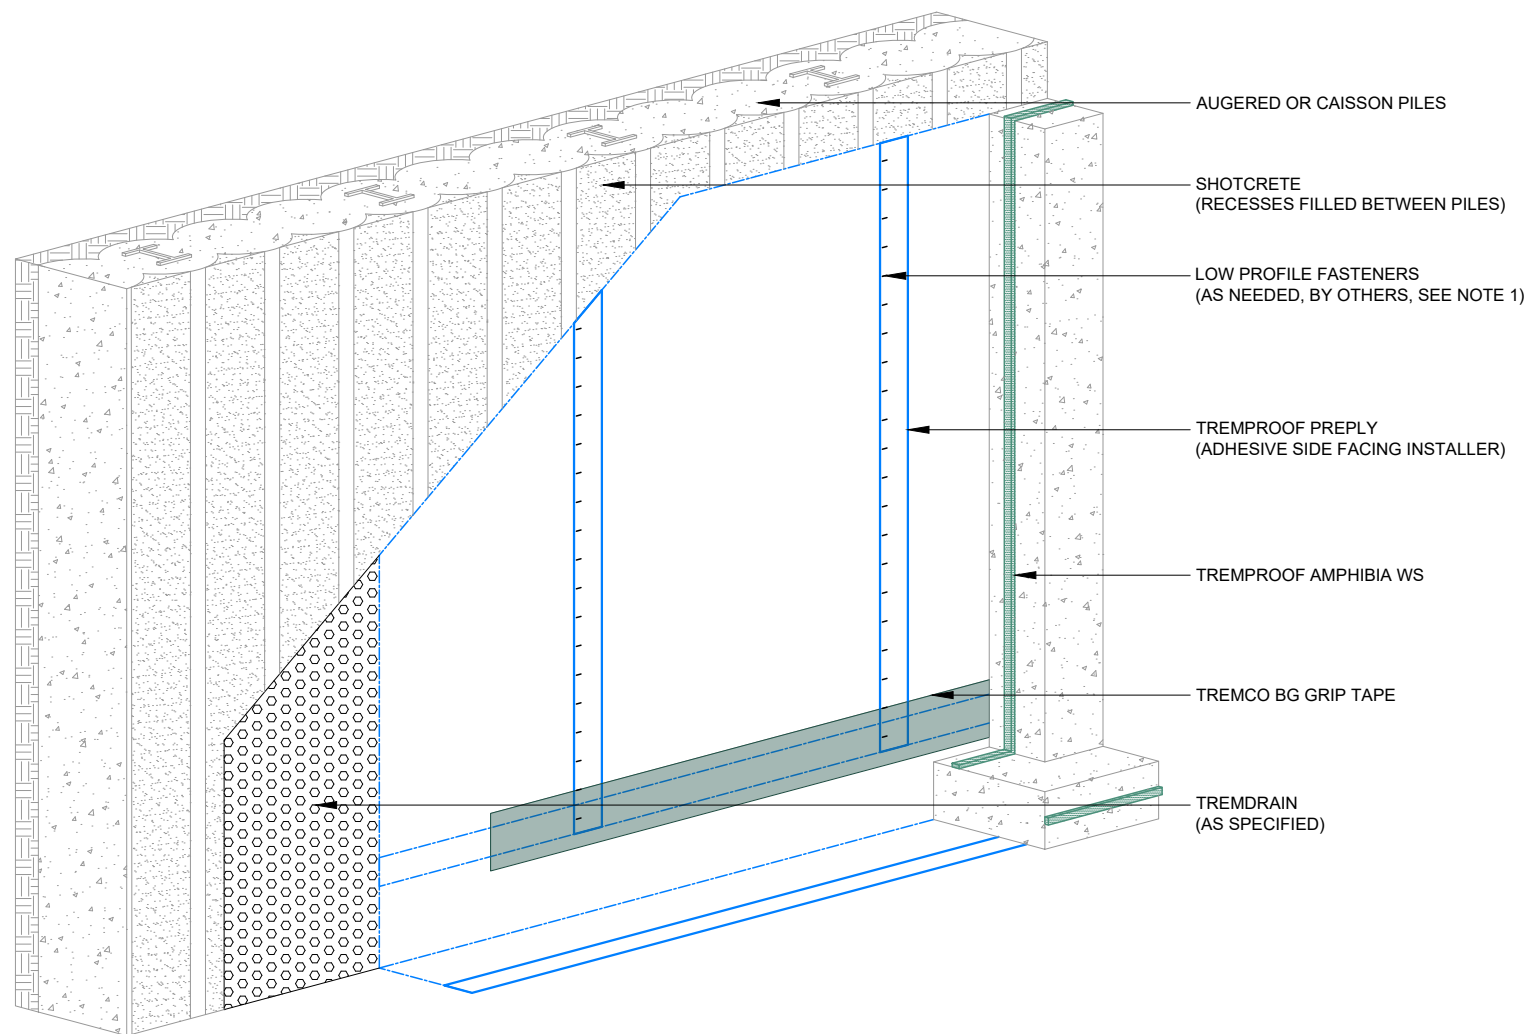

NOTE:

1. INSTALL LOW PROFILE FASTENERS WITHIN ADHESIVE LAP, AS NEEDED. FASTENERS SHOULD BE $\frac{1}{2}$ " MAX FROM EDGE OF SHEET.

This detail is for general informational purposes only. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project with respect to any architecture, engineering, and design requirements, including any local building code requirements. If this document is not reviewed and the product is not approved for use by a licensed design professional, the customer agrees that the detail may contain substantive flaws requiring correction, and hereby releases Tremco CPG Inc. from any and all liability related to the design and installation of the product. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.

TREMProof® PrePly™ - Blindside Wall



Detail: Augured or Caisson Secant Pile Wall

Drawn by: HDE

Checked by: MC

Scale: NTS

Revision #: R0


Revised by: NA

Date: 4/17/2026

File Name:

TPP BSW 4



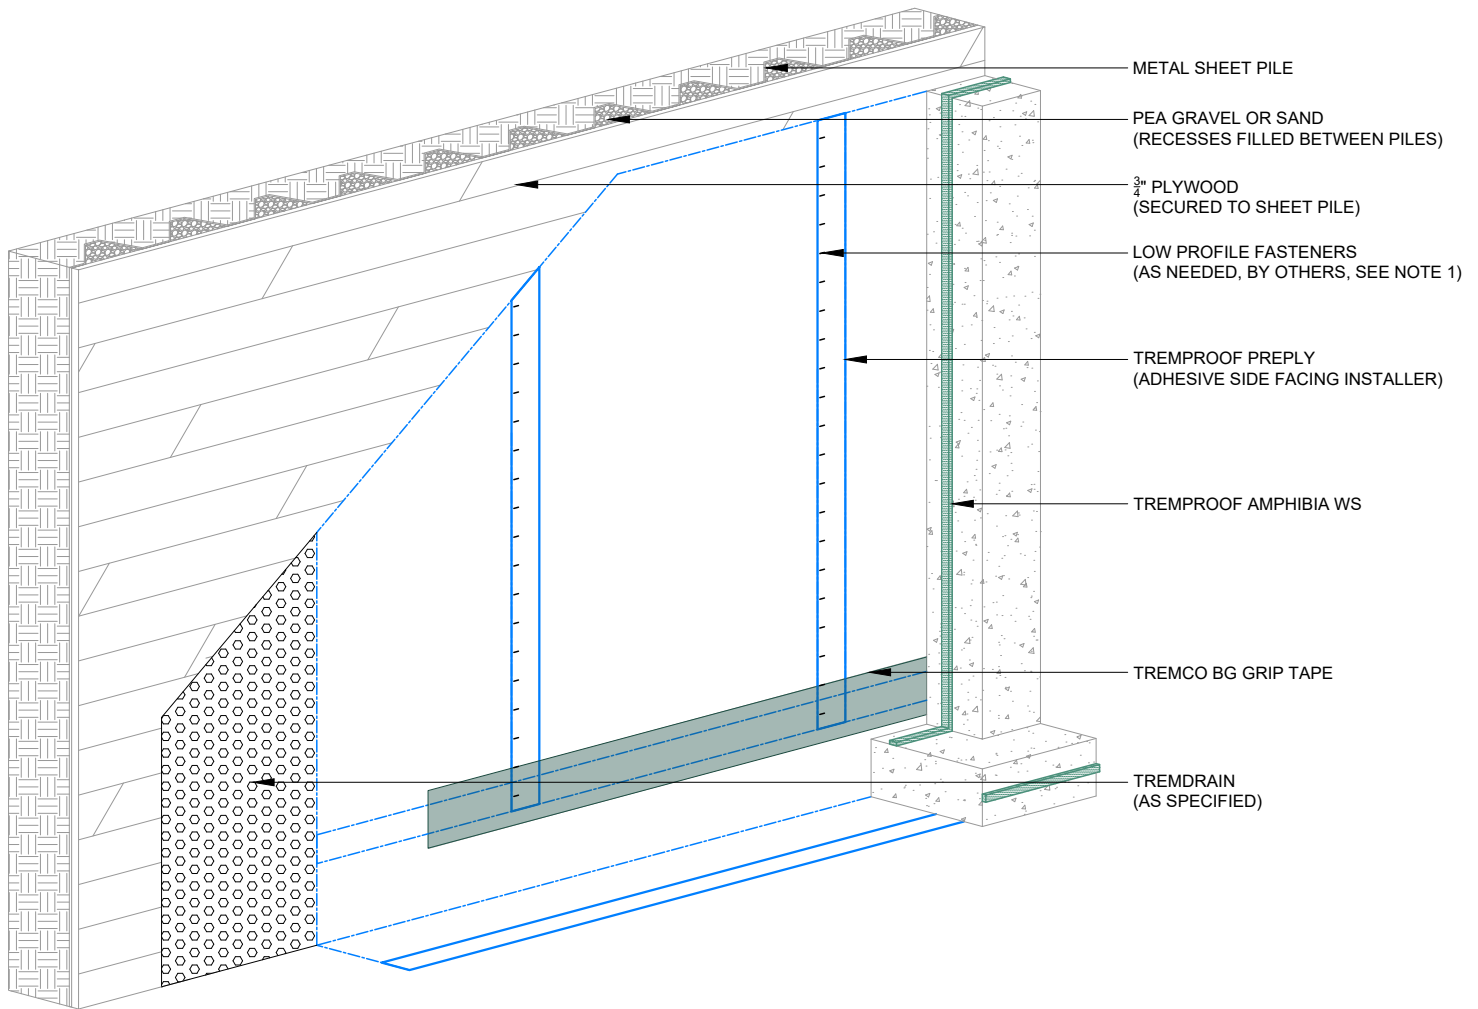

NOTE:

1. INSTALL LOW PROFILE FASTENERS WITHIN ADHESIVE LAP, AS NEEDED. FASTENERS SHOULD BE $\frac{1}{2}$ " MAX FROM EDGE OF SHEET.

This detail is for general informational purposes only. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project with respect to any architecture, engineering, and design requirements, including any local building code requirements. If this document is not reviewed and the product is not approved for use by a licensed design professional, the customer agrees that the detail may contain substantive flaws requiring correction, and hereby releases Tremco CPG Inc. from any and all liability related to the design and installation of the product. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.

TREMproof® PrePly™ - Blindside Wall



Detail: Sheet Steel Pile Wall

Drawn by: HDE

Checked by: MC

Scale: NTS

Revision #: R0


Revised by: NA

Date: 4/17/2026

File Name:

TPP BSW 5



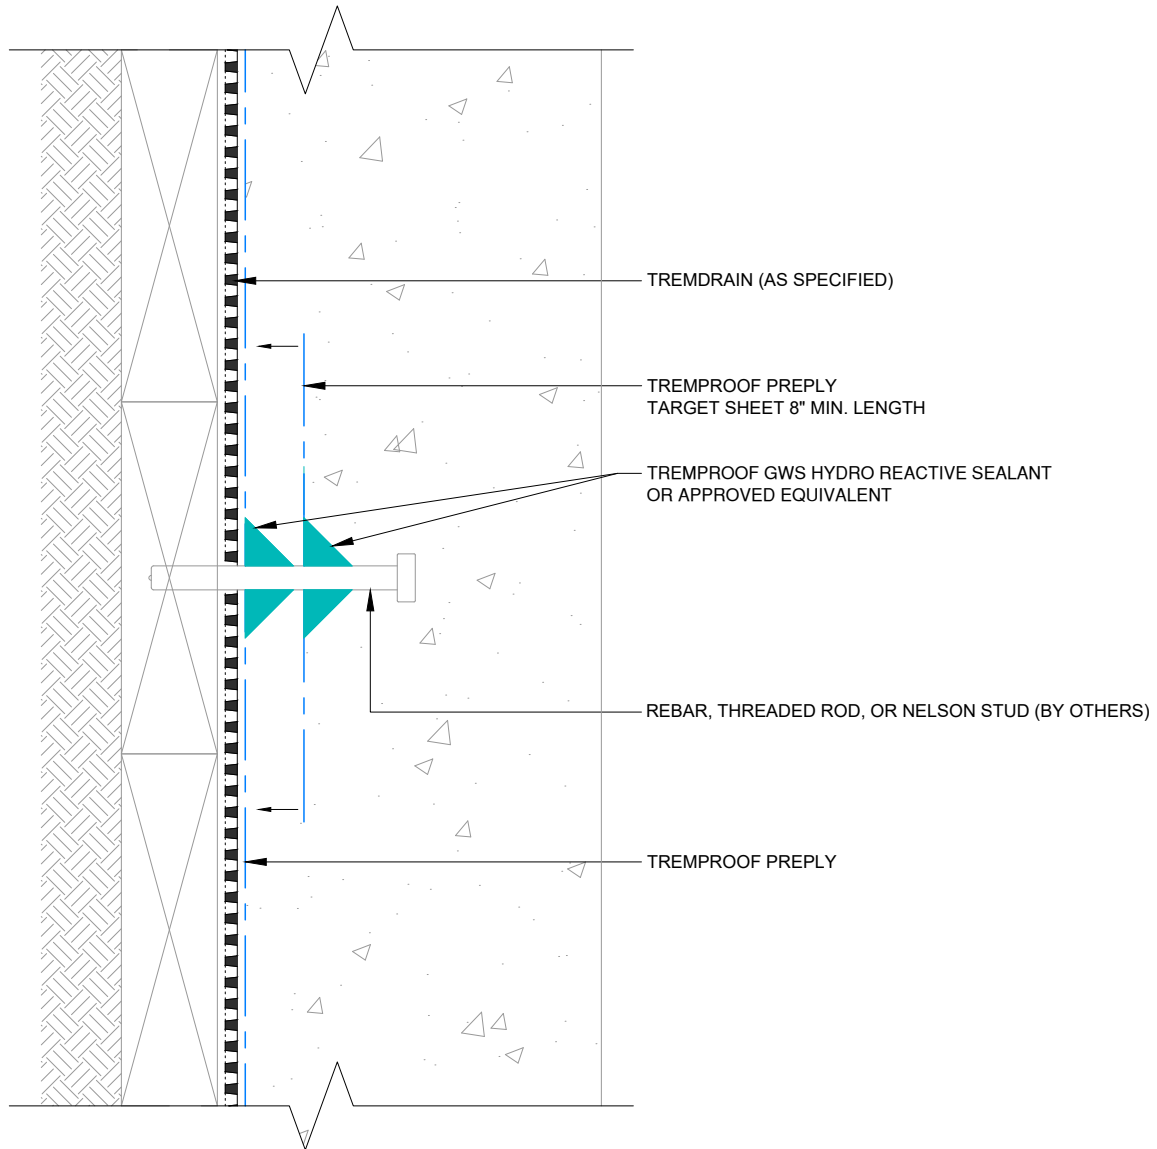

This detail is for general informational purposes only. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project with respect to any architecture, engineering, and design requirements, including any local building code requirements. If this document is not reviewed and the product is not approved for use by a licensed design professional, the customer agrees that the detail may contain substantive flaws requiring correction, and hereby releases Tremco CPG Inc. from any and all liability related to the design and installation of the product. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.

TREMproof® PrePly™ - Blindside Wall

Detail: Rebar, Threaded Rod, or Nelson Bolt

File Name:

Drawn by: HDE

Checked by: MC

Scale: 4" = 1'-0"

TPP BSW 6

Revision #: R0

Revised by: NA

Date: 4/22/2026

www.tremcocpg.com




Tremco Technical Support: 866-209-2404




Construction Products Group

SECTION VIEW

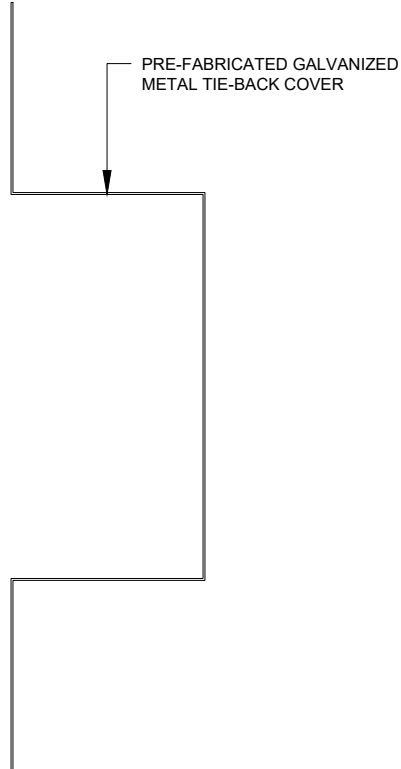

ISOMETRIC VIEW

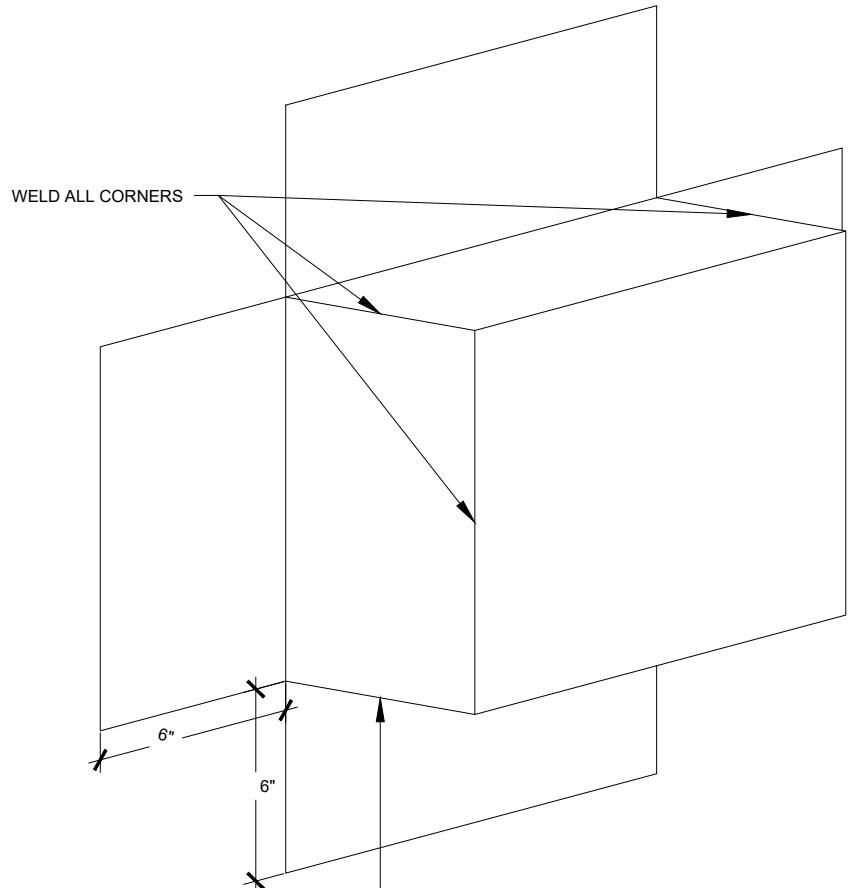

PRE-FABRICATED GALVANIZED METAL TIE-BACK COVER
(SIZE DETERMINED BY PROJECT CONDITIONS,
 $\frac{1}{2}$ " MIN. HEIGHT CLEARANCE BETWEEN TIE-BACK HEAD
AND METAL COVER)

This detail is for general informational purposes only. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project with respect to any architecture, engineering, and design requirements, including any local building code requirements. If this document is not reviewed and the product is not approved for use by a licensed design professional, the customer agrees that the detail may contain substantive flaws requiring correction, and hereby releases Tremco CPG Inc. from any and all liability related to the design and installation of the product. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.

TREMproof® PrePly™ - Blindside Wall

Detail: Pre-Fabricated Metal Tie-Back Cover

Drawn by: HDE

Checked by: MC

Scale: 2" = 1'-0"

Revision #: R0

Revised by: NA

Date: 4/17/2026

File Name:

TPP BSW 7




Tremco Technical Support: 866-209-2404



Construction Products Group

www.tremcocpg.com

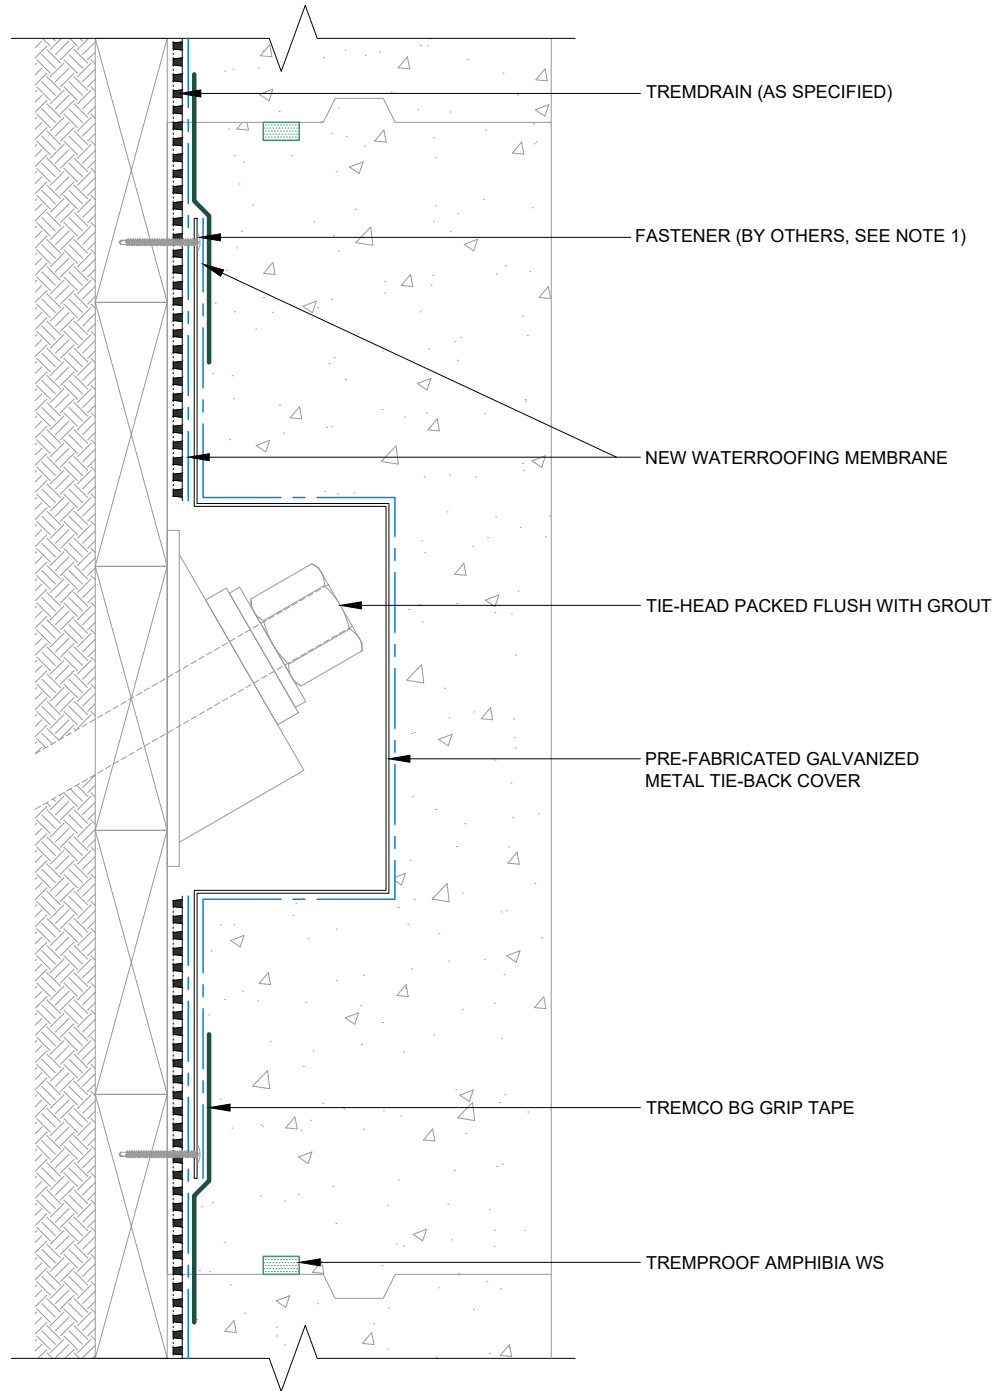

NOTE:

1. SECURE TIE-BACK COVER WITH FASTENERS AT ALL CORNERS. ADD FASTENERS AS NEEDED TO KEEP FLANGES FLAT AND SECURE.

This detail is for general informational purposes only. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project with respect to any architecture, engineering, and design requirements, including any local building code requirements. If this document is not reviewed and the product is not approved for use by a licensed design professional, the customer agrees that the detail may contain substantive flaws requiring correction, and hereby releases Tremco CPG Inc. from any and all liability related to the design and installation of the product. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.

TREMPROOF® PrePly™ - Blindside Wall



Tremco Technical Support: 866-209-2404

Detail: Detentioned Tie-Back with Pre-Fabricated Metal Cover

Drawn by: HDE

Checked by: MC

Scale: 2" = 1'-0"

Revision #: R0

Revised by: NA

Date: 4/17/2026

File Name:


TPP BSW 8




Construction Products Group

www.tremcocpg.com



TREMPROOF PREPLY TARGET SHEET
(PLAN VIEW)

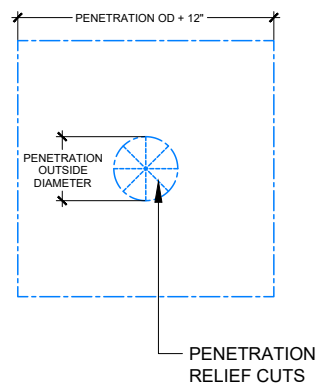

TREMPROOF PREPLY INSTALLATION
(ELEVATION VIEW)

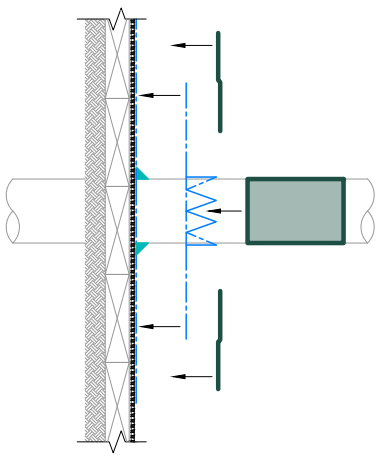

TREMPROOF PREPLY COMPLETE
ASSEMBLY
(ELEVATION VIEW)

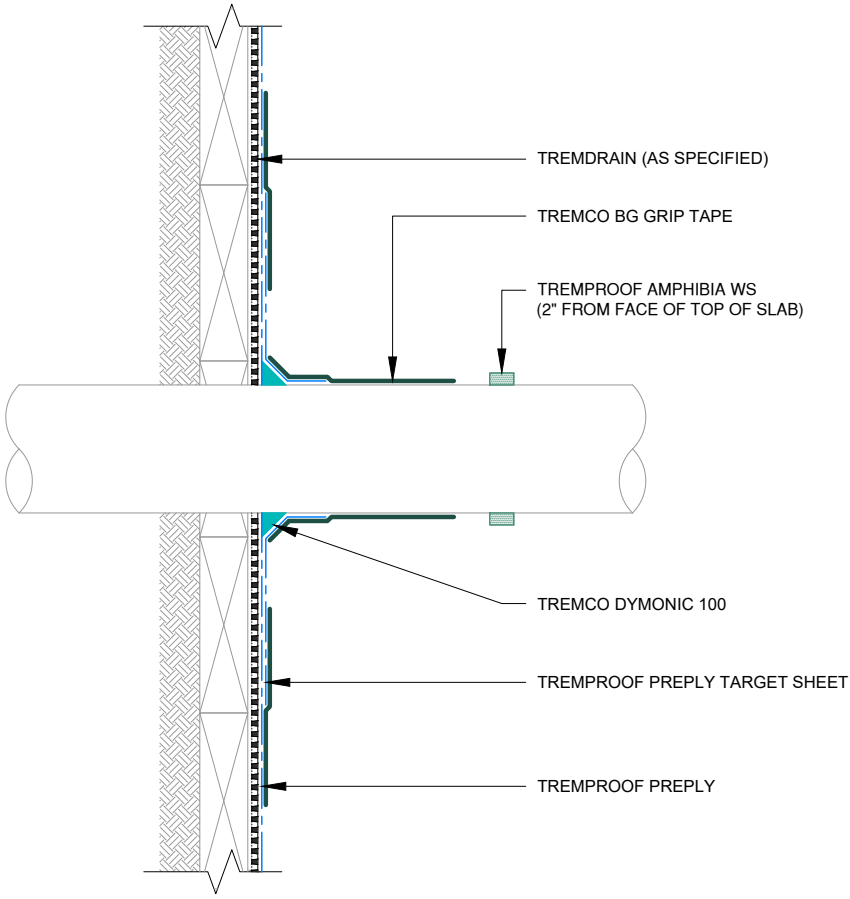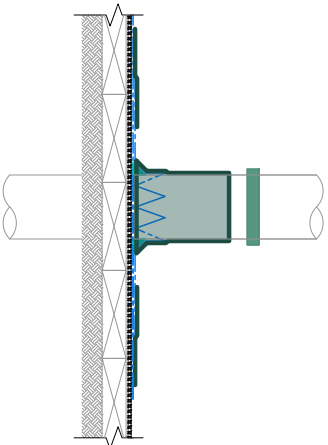

NOTE:

1. MAINTAIN 6" MIN. BETWEEN PENETRATIONS.

This detail is for general informational purposes only. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project with respect to any architecture, engineering, and design requirements, including any local building code requirements. If this document is not reviewed and the product is not approved for use by a licensed design professional, the customer agrees that the detail may contain substantive flaws requiring correction, and hereby releases Tremco CPG Inc. from any and all liability related to the design and installation of the product. This detail is subject to change without notice. Contact Tremco to ensure you have the most recent version.

TREMproof® PrePly™ - Blindside Wall					
 Tremco Technical Support: 866-209-2404	Detail: Penetration			File Name:	
	Drawn by: HDE	Checked by: MC	Scale: 2" = 1'-0"	TPP BSW 9	
	Revision #: R0	Revised by: NA	Date: 4/17/2026		
				 Construction Products Group	