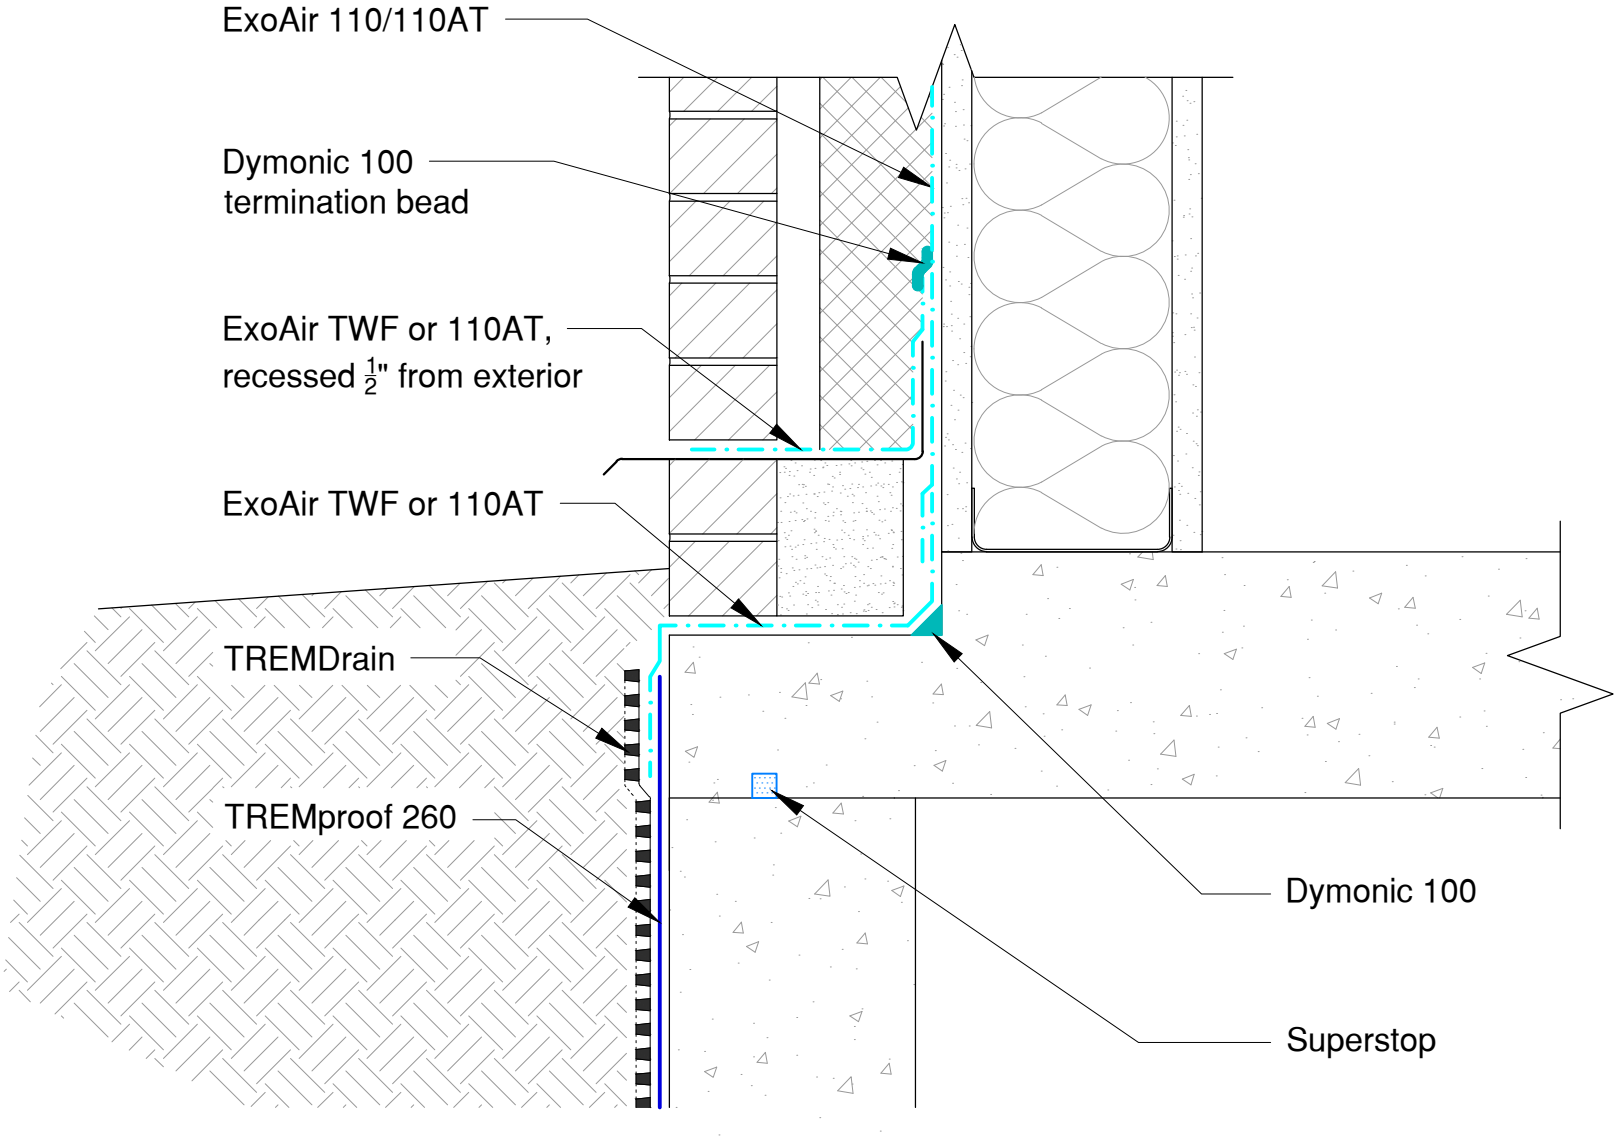

Notes: ExoAir Primer must be used with ExoAir 110 and ExoAir TWF

TREMCO
www.tremcosealants.com
3735 Green Road * Beachwood, OH 44122
Phone : 866-209-2404 * Fax: 216-766-5535

Project:

Detail: Impermeable Sheet Transition to TREMproof 260

This detail is intended for conceptual purposes only.

Drawn by: KAB

Checked by: MAT

Scale: None

Sheet Number:

Date: 12/21/2018

File Name: AVB-SI-S-T-02